




PROFESSIONAL TIMING

SCHEMA D'INSTALLATION MOTOCROSS - SYSTEME 1

- Fil de boucle
- RS485
- RJ45 Cable
- Câble coaxial RG58 ou RG223
- Cable 2 conducteurs
- RCA ou BNC Cable

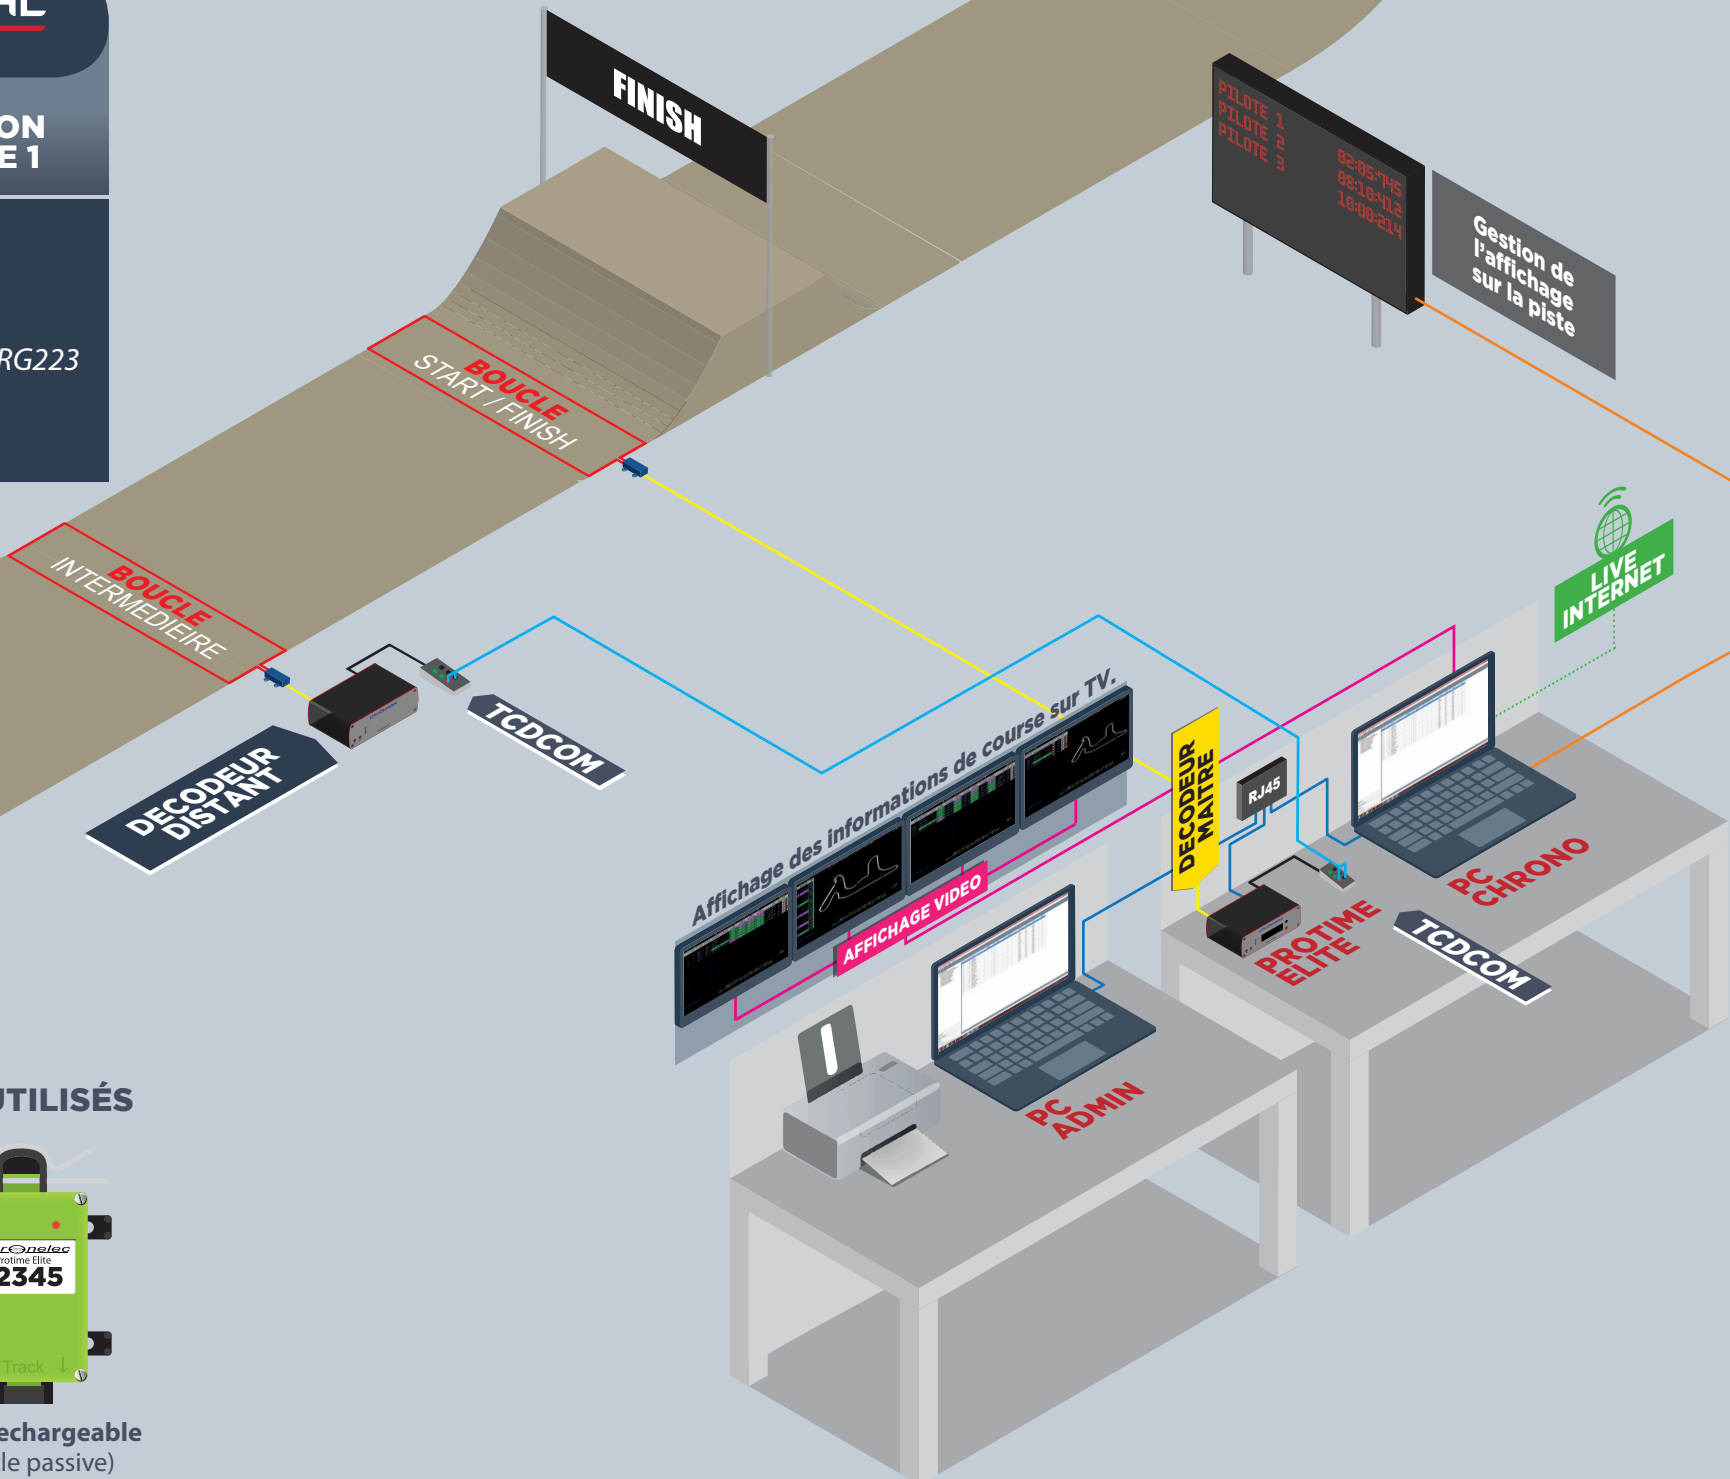

TRANSPONDEURS UTILISÉS



LS Rechargeable (boucle passive)






ELITE Rechargeable (boucle passive)



PROFESSIONAL TIMING

SCHEMA D'INSTALLATION MOTOCROSS - SYSTEME 2

- Fil de boucle
- RS485
- RJ45 Cable
- Câble coaxial RG58 ou RG223
- RCA ou BNC Cable

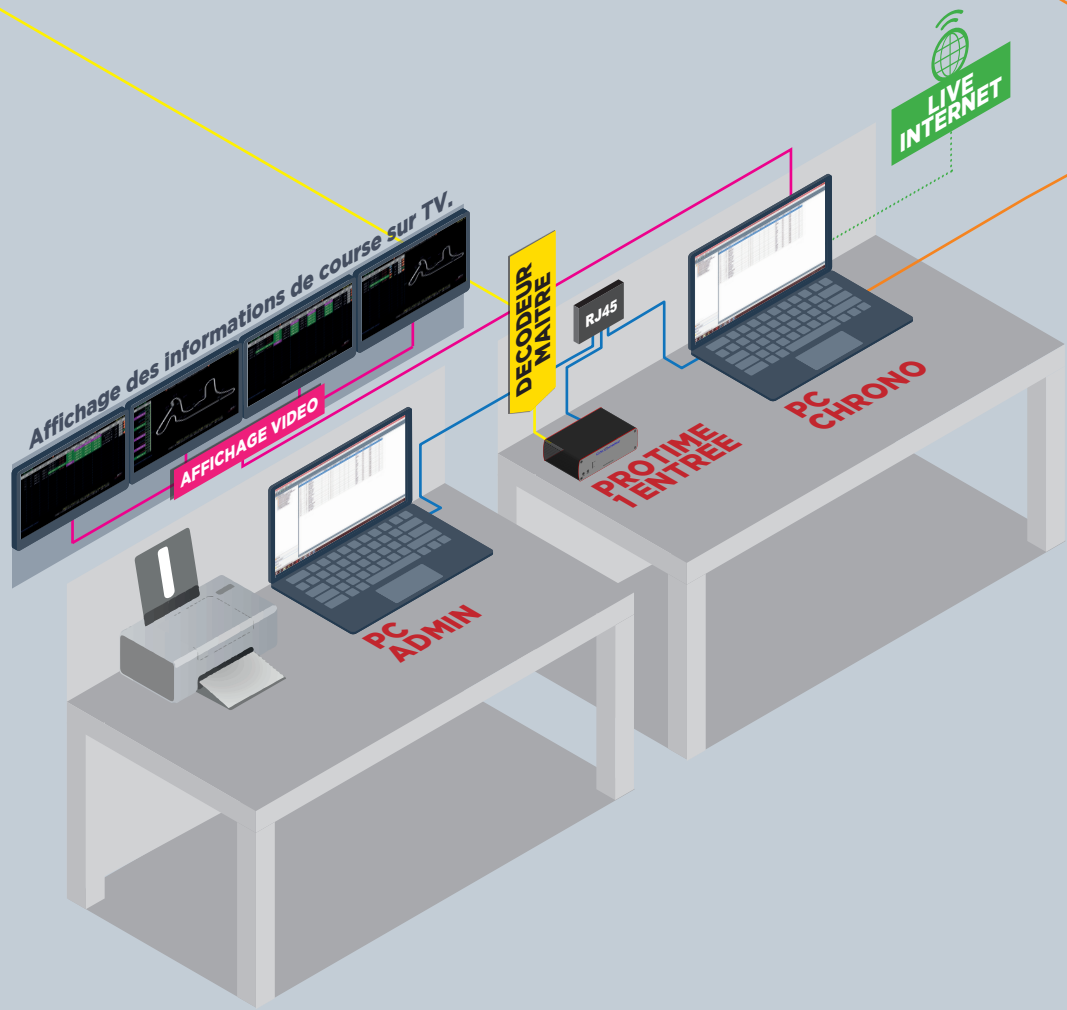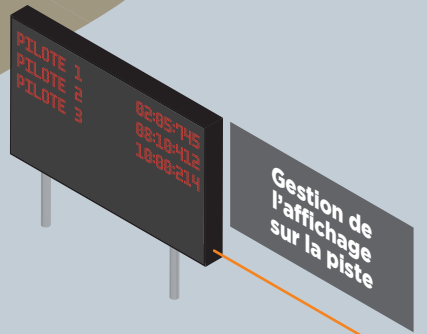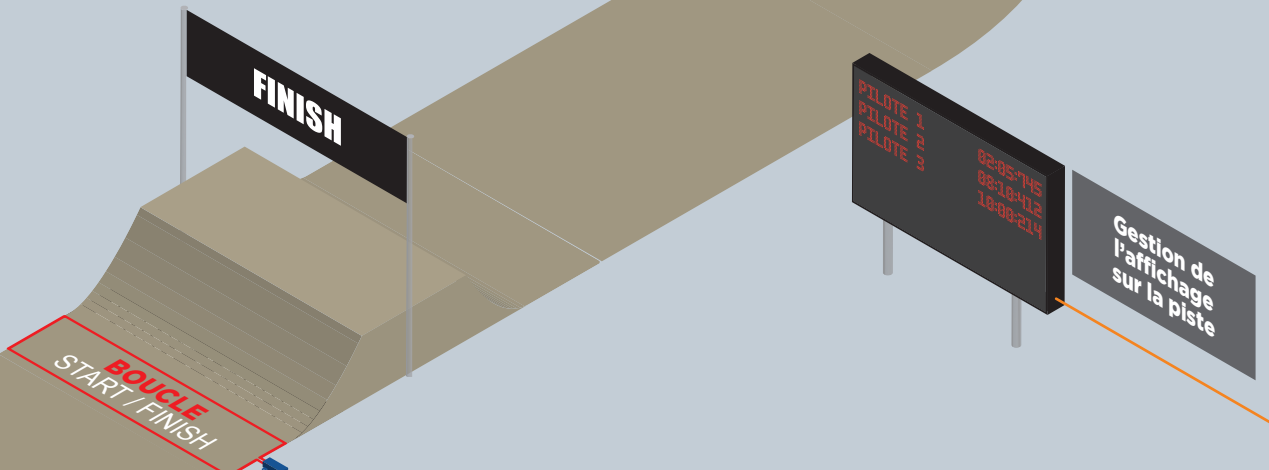

TRANSPONDEURS UTILISÉS



LS Rechargeable (boucle passive)



ELITE Rechargeable (boucle passive)